

Table 2: Camera buttons and connections descriptions

Camera button / connection	Description
1	Focus button <ul style="list-style-type: none">• Hold for 3 seconds to run one touch focus
2	Factory reset <ul style="list-style-type: none">• Hold for 5 seconds for soft reset• Hold for 20 seconds for hard reset
3	USB cable connection
4	Micro SD card slot
5	PoE cable slot
6	AC cable connection
7	Audio / Alarm cable connection

Adjusting the camera position

1. Use the 'L' type wrench to:
 - i. Unlock the screw (6) (Figure 1) and tilt the camera body.
 - ii. Unlock the screw (6) (Figure 1) and tilt the camera body.

Note: You must securely attach both screws to ensure that the camera holds the modified position.

Adjusting the sun shield

1. Loosen the thumb-screw on the sun-shield cover (1) (Figure 1) to move the sun shield cover forward and backward over the camera body.

Note: You must securely lock the sun shield thumb-screw to ensure that the covers holds the modified position.

Warnings

- This product is intended for professional installation, please follow local wiring regulations.
- To meet EU security immunity requirements this product should be used with an Uninterruptable Power Supply to feed the mains input of any power adaptor.
- The product should be powered by a limited power supply (LPS) sized according to the product rating label.
- The LAN symbol on the unit means this is not intended for connection to a public network or a LAN from a different building.
- Do not install where children are likely to have access.
- For outdoor use the camera should be mounted at least 3m above ground level.

© 2020 Johnson Controls. All rights reserved.

JOHNSON CONTROLS, TYCO and ILLUSTRATE are trademarks and/or registered trademarks. Unauthorized use is strictly prohibited.